




LG VX4400 Microphone Replacement

This guide illustrates how to replace the microphone on an LG VX4400 phone.

Written By: Nico Chiarito

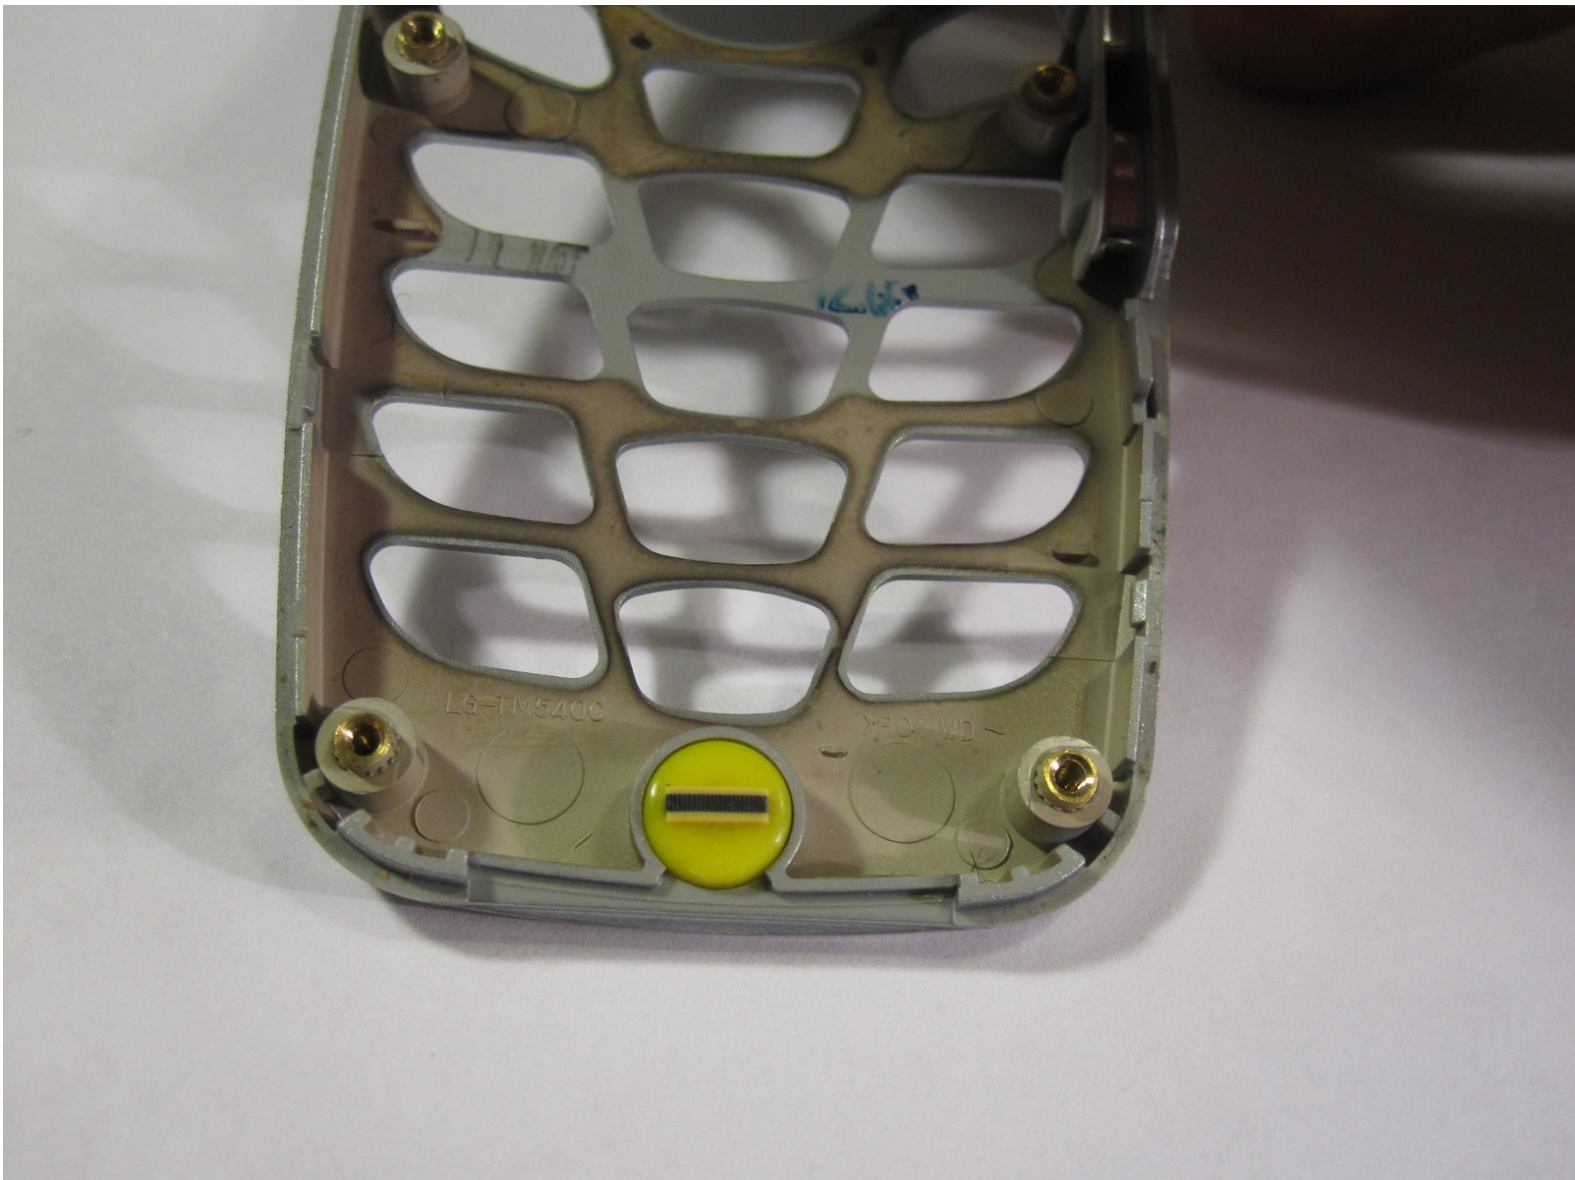




TOOLS:


- [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

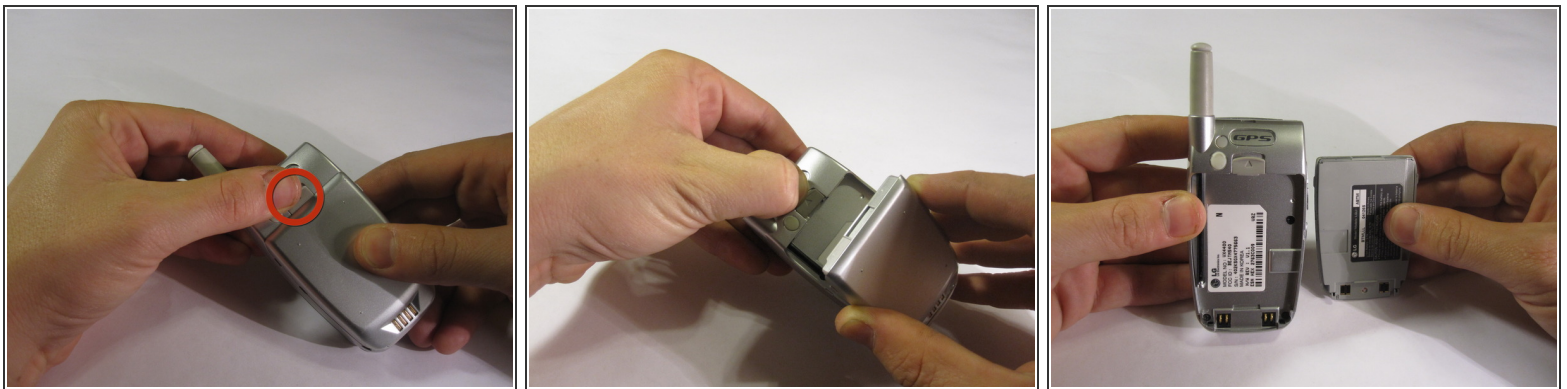

- While sliding the latch above the battery upwards, grasp top of battery and pull away from phone. Set battery aside.

Step 2 — Antenna

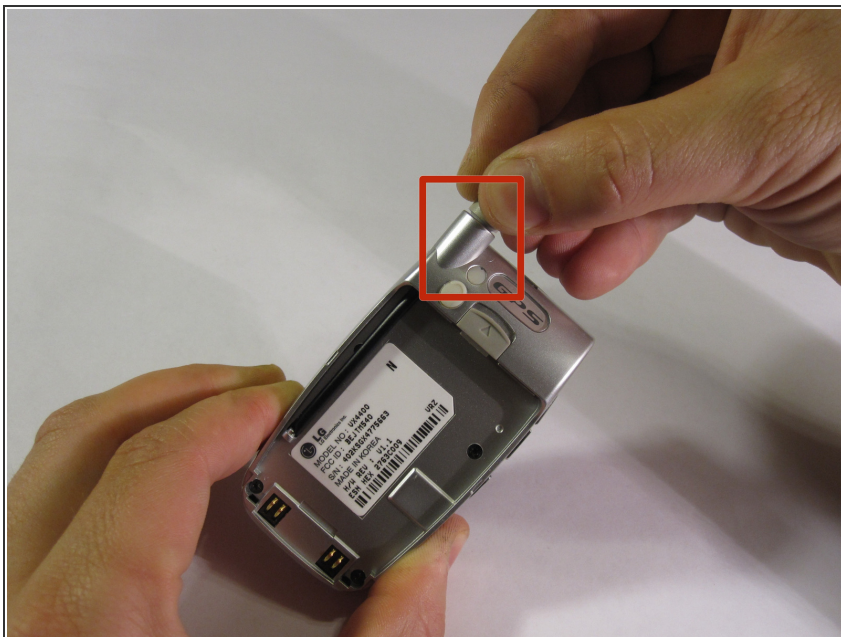


- Unscrew the antenna by grasping the base and twisting counterclockwise.
- ⚠ The antenna may separate from a black sleeve during removal. You may need to use tweezers to remove the sleeve. Remove both the antenna and the sleeve and set aside.

Step 3 — Back Cover



- The phone may have a rubber insert in the bottom of the phone (see picture). If this rubber insert exists, remove it from the bottom of phone and set aside.

Step 4

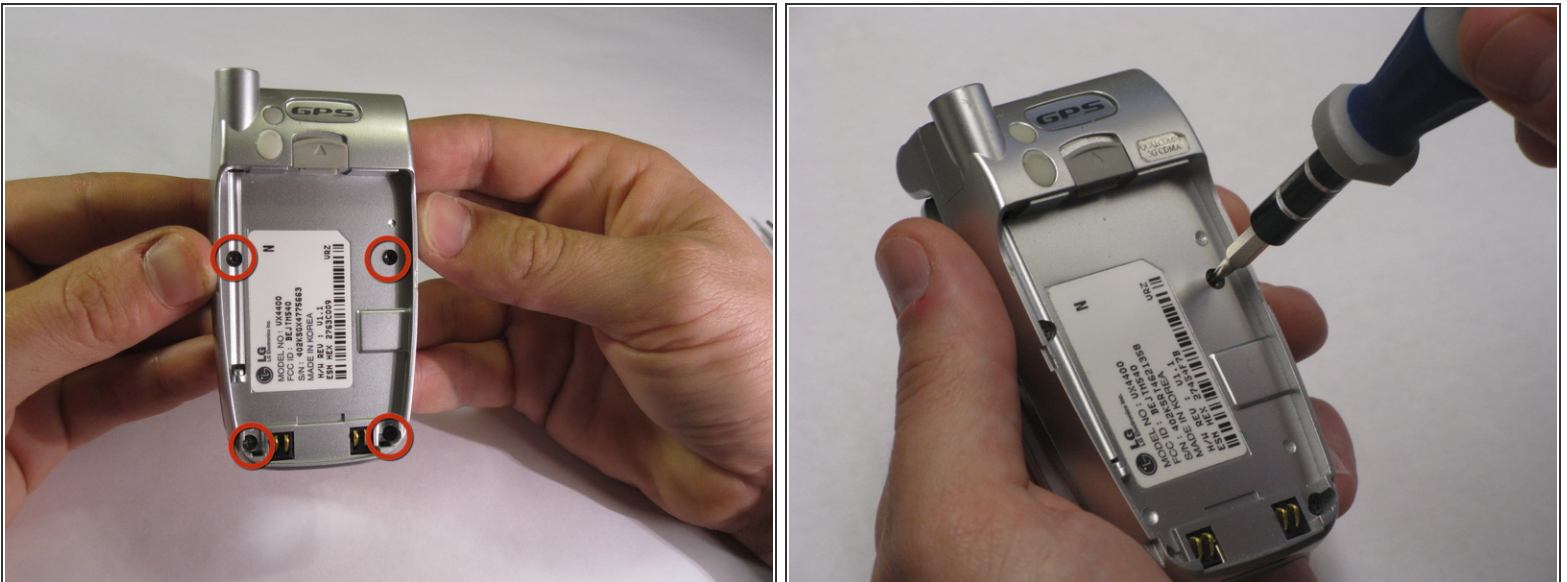


- Using a Torx screwdriver with a T6-sized bit, unscrew the four screws on the back of the phone.
- ⓘ The bit size is engraved on the base of the bit head.

Step 5





- With the phone flipped open, wedge the back cover from the faceplate by running the tip of the plastic opening tool around the seam on the back of the phone.
 - Gently pull the two pieces apart to separate.
- ⚠ Apply enough force to separate the pieces without cracking the back cover.

Step 6

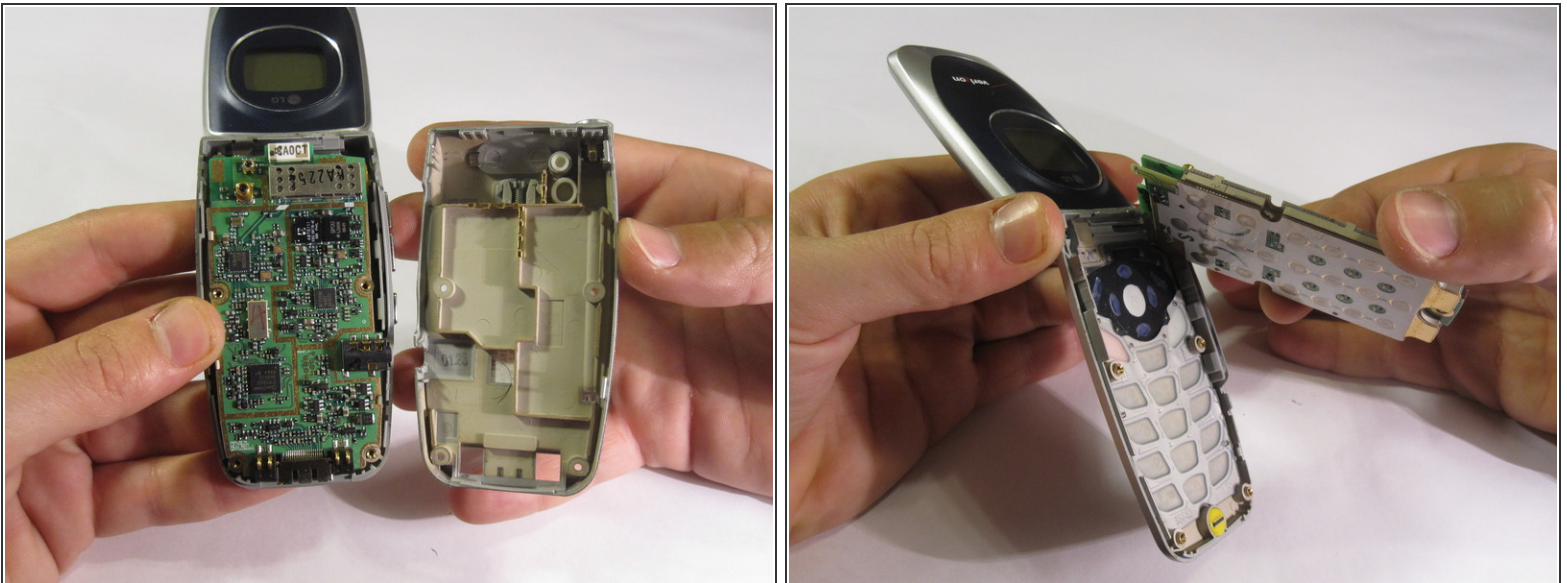

- Lift the computer chip to gain access to the keypad and side buttons beneath.
- ⚠ CAUTION: The computer chip is attached with a thin ribbon wire at upper right corner of case. DO NOT BREAK THE RIBBON WIRE.

Step 7 — Microphone

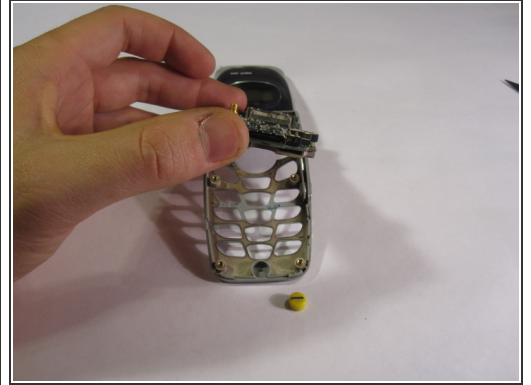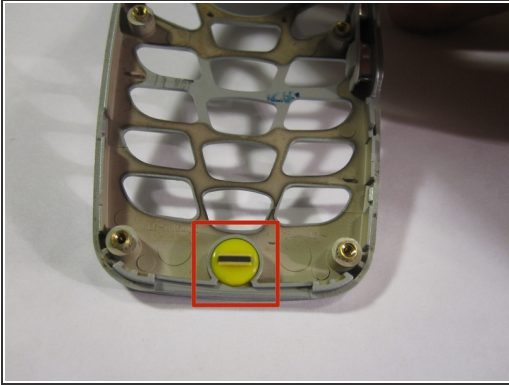

- Using your fingers or the pointed end of a black plastic spudger, pry the microphone out and replace.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 09:26:21 AM.